

**AIR PUSH KEYPAD FUNCTIONS**

**1: BLOWER**

- 1<sup>st</sup> Press: Blower starts at high speed.
- 2<sup>nd</sup> Press: Blower changes to medium speed.
- 3<sup>rd</sup> Press: Wave mode.
- 4<sup>th</sup> Press: Blower stops.

**2: ON/OFF PUMP**

- 1<sup>st</sup> Press: The pump starts.
- 2<sup>nd</sup> Press: The pump stops.

**3: CHROMATHERAPY**

- 1<sup>st</sup> Press: Turn on the light in white.
  - 2<sup>nd</sup> Press: Rainbow cycle – Low speed.
  - 3<sup>rd</sup> Press: Rainbow cycle – High speed.
  - 4<sup>th</sup> Press: Turquoise.
  - 5<sup>th</sup> Press: Blue.
  - 6<sup>th</sup> Press: Magenta.
  - 7<sup>th</sup> Press: Red.
  - 8<sup>th</sup> Press: Orange.
  - 9<sup>th</sup> Press: Yellow.
  - 10<sup>th</sup> Press: Green.
  - 11<sup>th</sup> Press: Turn off the light.
- Press and hold 2 sec. at anytime to turn off the chromatherapy.

**ADVANCED PROGRAMMING**

**OZONATOR CLEANING CYCLE**

A 15 minutes cleaning cycle begins one (1) hour after no more water is detected by the water detectors.

**INTEGRATED 20 MINUTE AUTOMATIC TIMER**

Integrated 20 minute automatic timer on the complete system. Count down starts with the last system turned on.


**DRYING CYCLE**

A 1 minute automatic drying cycle will start 20 minutes after the blower is turned off.

**COMPONENTS**

- A: AIR PUSH KEYPAD**....CG/AB3-A-MR-BUV/PUU/CHY-VUY-WP
- B: PVC 1/8" FLEXIBLE HOSES**.....TUYAU-1/8\_AIRPUSH
- C: U.C.U. UNIVERSAL CONTROL UNIT** .....
- .....UCU0-15-120/60-BV/PT/CH-N/4N-BW01
- D: 3 RGB LED LIGHT**.....LT-LED03RGB-R-\*\*
- E: OZONATOR** .....O3-120/60-N-D1+CG01/NC
- F: BLOWER** .....SL0-3-50-120/60A-N
- G: PUMP** .....PCG-7-N
- PROBE** .....CE-WD-SCREW-CM

**AIR , WHIRLPOOL, OZONATOR AND CHROMATHERAPY SYSTEM**

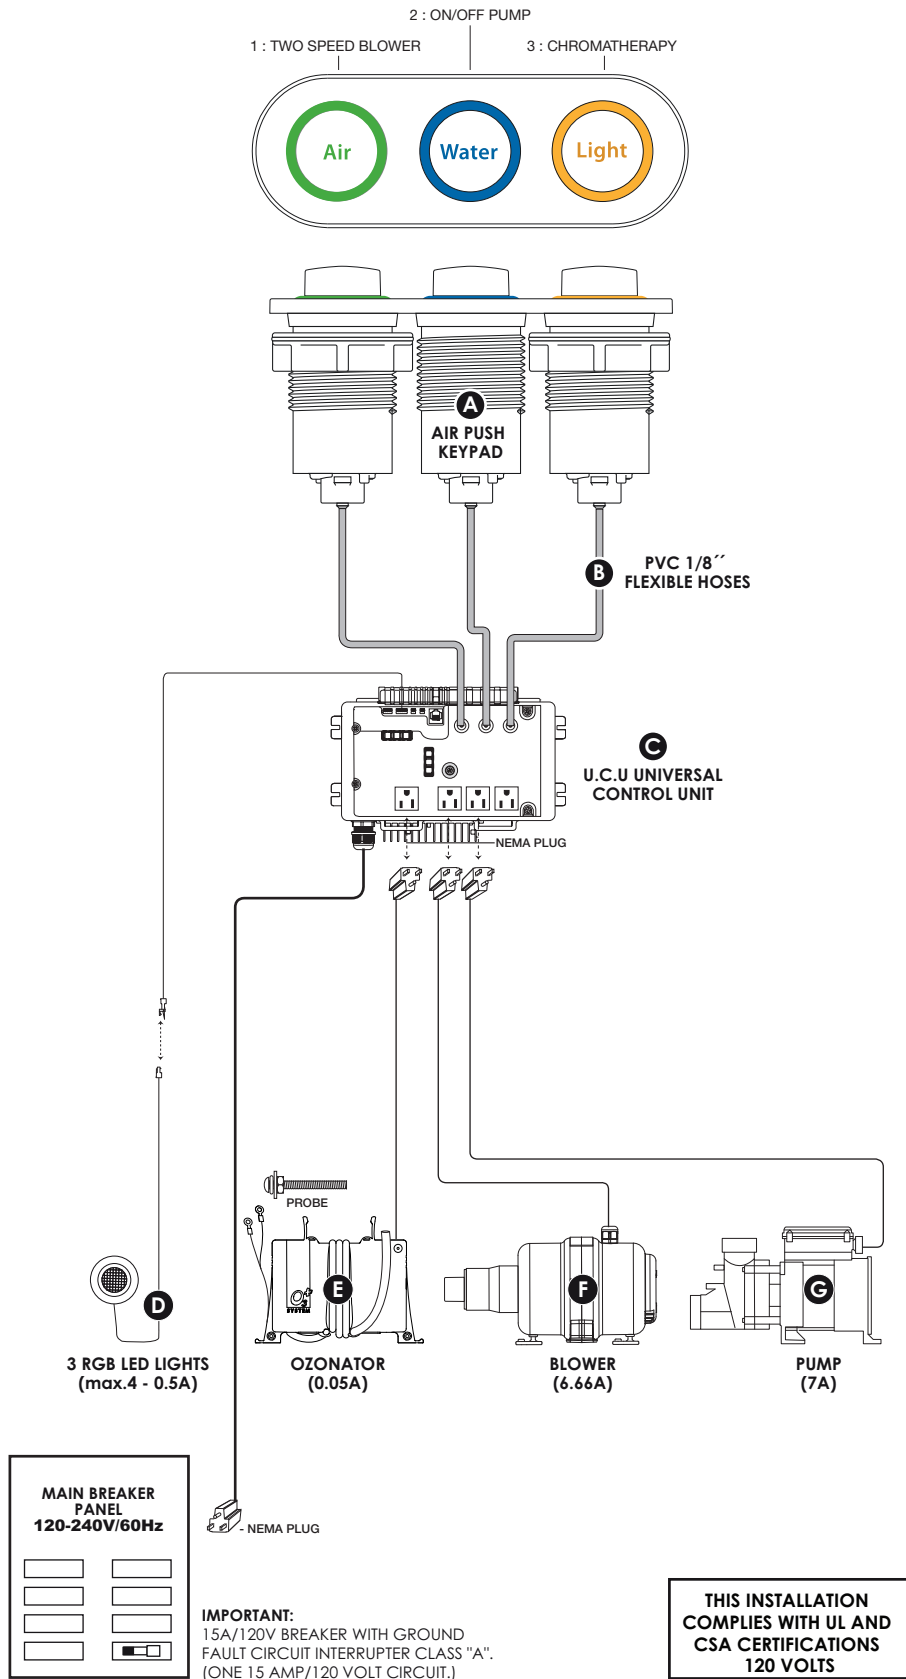


**NOTE:** \_\_\_\_\_

**SIGNATURE/DATE:** \_\_\_\_\_

# BOCA WALK-IN TUBS

## AIR, WHIRLPOOL, OZONATOR AND CHROMATHERAPY SYSTEM

### 1 AIR PUSH KEYPAD Functions

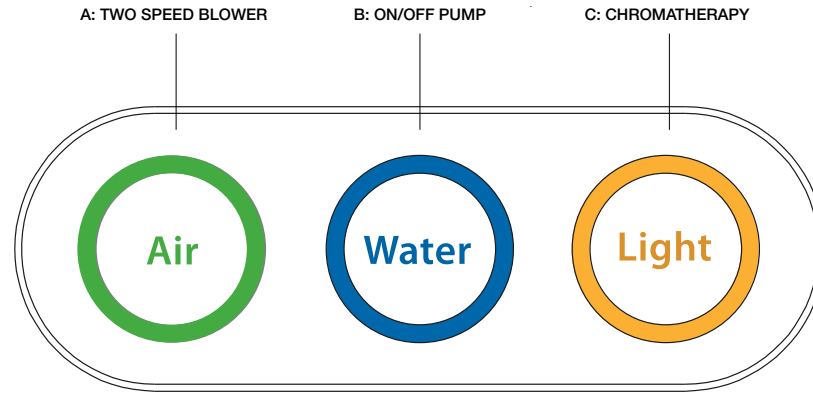

#### AIR PUSH KEYPAD FUNCTIONS

##### A: BLOWER

- 1<sup>st</sup> Press: Blower starts at high speed.
- 2<sup>nd</sup> Press: Blower changes to medium speed.
- 3<sup>rd</sup> Press: Wave mode.
- 4<sup>th</sup> Press: Blower stops.

##### B: ON/OFF PUMP

- 1<sup>st</sup> Press: The pump starts.
- 2<sup>nd</sup> Press: The pump stops.

##### C: CHROMATHERAPY

- 1<sup>st</sup> Press: Turn on the light in white.
- 2<sup>nd</sup> Press: Rainbow cycle – Low speed.
- 3<sup>rd</sup> Press: Rainbow cycle – High speed.
- 4<sup>th</sup> Press: Turquoise.
- 5<sup>th</sup> Press: Blue.
- 6<sup>th</sup> Press: Magenta.
- 7<sup>th</sup> Press: Red.
- 8<sup>th</sup> Press: Orange.
- 9<sup>th</sup> Press: Yellow.
- 10<sup>th</sup> Press: Green.
- 11<sup>th</sup> Press: Turn off the light.
- Press and hold 2 sec. at anytime to turn off the chromatherapy.

#### ADVANCED PROGRAMMING

##### OZONATOR CLEANING CYCLE

A 15 minutes cleaning cycle begins one (1) hour after no more water is detected by the water detectors.

##### INTEGRATED 20 MINUTE AUTOMATIC TIMER

Integrated 20 minute automatic timer on the complete system. Count down starts with the last system turned on.

##### DRYING CYCLE

A 1 minute automatic drying cycle will start 20 minutes after the blower is turned off.